



IntraCore 8000 and 9000

Additional Release Notes

24 May 2000

Configuring for management

IMPORTANT: The IntraCore 8000 and 9000 are shipped with default SNMP community strings "public" for read access and "private" for read-write access. For security reasons you should change these default community strings before putting the IntraCore on your network.

Management Interface

For security reasons, the password prompt for the console and telnet interfaces has been moved to the initial connection. No management information can be seen without entering the password.

IMPORTANT: The default password for the web browser management interface has been changed to IntraCore (case sensitive). The password is the same as the currently set console password (default = Asante).

Web Browser Management

The IntraCore 8000 and 9000 have the ability to disable the built-in web server. The HTTP server is **DISABLED** by default. To enable the web server, use the console or telnet interface and enter the Configuration menu. Select "u" for User Interface configuration and "o" to toggle the state of the web server.

Stack Change

The modules for the 8000 and 9000 are not hot-swappable.

Port Priority Levels

The allowed range for port priority is now 0-7, where 7 is the highest priority.