



AsantéHub RJ21 Module
Important!

For proper operation of this RJ-21 module you must have version 1.4 of the hub software (image code) loaded in the network management module of the AsantéHub 2072.

Before installing this module in an AsantéHub 2072, check (using AsantéView or the terminal interface) the software version loaded in the hub's Network Management Module.

To check the image code version currently loaded on the Network Management Module using AsantéView:

1. Launch the AsantéView Application and discover the AsantéHubs.
2. Go to the Configure Menu, and choose "Information" for each 2072.
3. Check the "Software Version" of the 2072.
4. If the Software Version is less than 1.4, upgrade the hub software following the procedure outlined in the AsantéView 2.2 User's Guide . If you are using the Windows version of AsantéView, See Chapter 1, under Advanced Procedures, Upgrading Hub Software. If you are using AsantéView for Macintosh see Chapter 3, under Software Upgrades, in AsantéView Users Guide for Macintosh. The hub software can be downloaded either via in-band or out-of-band AsantéView.

Note: For your convenience the AsantéHub 2072 Image Code, Version 1.4 is included in this package on two diskettes: one PC format, one Macintosh format.