



IntraStack™ 6008FXE

READ ME FIRST

Thank you for purchasing the IntraStack 6008FXE. This document contains important information regarding the IntraStack 6008FXE and IntraStack 6014DSB. Please review both sides of the document before proceeding with the installation.

Runtime Image Version 1.01

Please install the new version (1.01) of the IntraStack's runtime software image (included in this package) in your IntraStack 6014DSB base unit. Refer to Chapter 5 of the IntraStack 6014DSB User's Manual for instructions on installing the software.

Features

Version 1.01 of the runtime software image has the following features:

- ❑ Expansion unit support (up to **two** expansion units may be stacked on top of the 6014DSB base unit).
- ❑ Auto-negotiation — the auto-negotiation feature defaults to 10/100Mbps **half duplex** (you can manually configure a port to full duplex mode or re-enable the full NWay™ auto-negotiation feature per port via Console/Telnet/HTTP Server access [refer to Chapter 5 of the IntraStack 6014DSB User's Manual for instructions]).
- ❑ New reset option — an additional option has been added that allows you to reset all settings to the factory defaults **except IP values and bootstrap information**.

Errata

- ❑ Image files — there is no ability to download image files through an FX port via the Boot PROM-based loader (this function is fully enabled on all TX ports). Downloading via an FX port is supported with the runtime-based loader.
- ❑ Console time-out parameter — not retained after a reset (default is 5 minutes).

Attention Macintosh Users!

If you are using an AsantéFAST 10/100 PCI card and want to operate your Macintosh in full duplex mode, install the 2.4 driver included in this package.