

ASANTÉ

Asanté NetStacker

READ ME FIRST

Thank you for purchasing an Asanté NetStacker!


Important - NetStacker and AsantéView Network Management Software

The Asanté NetStacker equipped with the NetStacker NMM Lite must be managed using AsantéView Network Management Software Version 2.3 or above. If you have an earlier revision of AsantéView you may upgrade by contacting Asanté Technical Support.


Stacking the NetStacker Hubs in a Standalone Configuration

Included with every NetStacker Expansion Hub are four hub straps which should be used to interconnect the hubs if they are to be used in a stand-alone situation - i.e. they are not to be placed in a rack mount enclosure. These straps should be placed on both sides of the hub using the black fasteners included in the accessory box of the Expansion Hub.

Side View of NetStackers

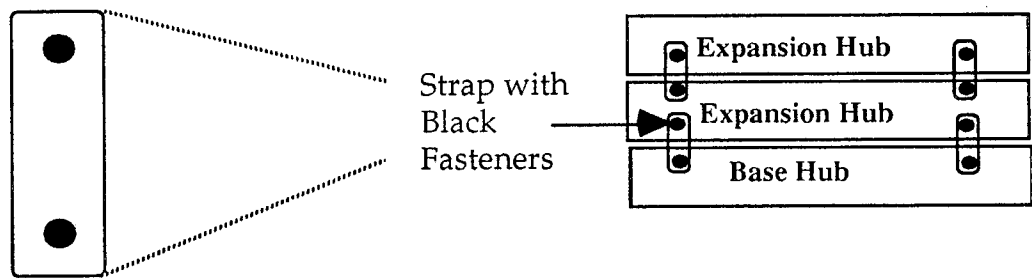

To install, simply position the plastic strap over the mounting holes, then push in first the fastener sheath, and then the fastener pin, through the strap, as shown below.

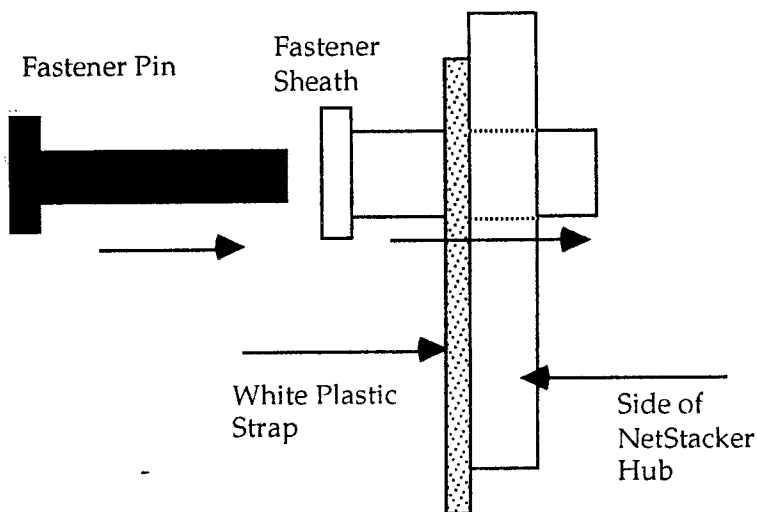

To remove plastic hub traps:

Reverse the installation procedure, using a small flat instrument (such as a small flat-head screw driver) to leverage the Fastener Pin (not the sheath) out, then remove the sheath.

Please Mail in Your Registration Card Today for Warranty and Technical Support

Mail your product registration card today. The Asanté NetStacker is backed by a 1 year warranty but we must receive your registration card. By mailing in your registration card you will also receive product enhancement and upgrade information.

NetStacker Configuration Information

In any NetStacker hub group you must always have a NetStacker Base Hub on the bottom of the stack. Up to two NetStacker Expansion hubs can be stacked on top of a Base Hub.

Package Contents

The following is a list of the appropriate package contents for the different NetStacker configurations. Please identify the configuration you have purchased. If a component of the product you've purchased is missing please contact the Asanté Technical Support Department at 1-800-622-7464 or at 408-435-8388.

Part Number 99-00184-01 Asanté NetStacker 2-slot Base Hub

1. One (1) Asanté NetStacker 2-slot Base chassis
2. One (1) AC Power cord
3. One (1) NetStacker Hub Installation Guide
4. One (1) set of rack mounting brackets
5. One (1) Plastic bag with 8 mounting screws & 4 rubber feet
6. One (1) Registration card

Part Number 99-00186-01 Asanté NetStacker 2-slot Base Hub with 24 Port RJ45 Module

With Part Number 99-00186-01 you receive all the contents included in Part Number 99-00184-01 plus:

1. One (1) Preinstalled RJ45B Module
2. One (1) RJ 45B Module Installation Guide

Part Number 99-00188-01 Asanté NetStacker 2-slot Base Hub with 24 Port RJ45 Module & NMM Lite

With Part Number 99-00188-01 you receive all the contents included in Part Number 99-00186-01 plus:

1. One (1) Preinstalled NetStacker NMM Lite Module
2. One (1) NetStacker NMM Lite Module Installation Manual

Part Number 99-00185-01 Asanté NetStacker 2-slot Expansion Hub

1. One (1) Asanté NetStacker 2-slot Expansion chassis
2. One (1) AC Power cord
3. One (1) NetStacker Hub Installation Guide
4. One (1) set of rack mounting brackets
5. One (1) Plastic bag with 8 mounting screws
6. One (1) Plastic bag with four hub straps and 8 fasteners
7. One (1) Registration card

Part Number 99-00187-01 Asanté NetStacker 2-slot Expansion Hub with 24 Port RJ45 Module

With Part Number 99-00187-01 you receive all the contents included in Part Number 99-00185-01 plus:

1. One (1) Preinstalled RJ45 Module
2. One (1) RJ 45 Module (Either the AH2072 RJ45 Module or the RJ45B Module) Installation Guide

End