



NetStacker™

READ ME FIRST

Thank you for purchasing the Asanté NetStacker multi-segment Ethernet hub.

This document contains important information regarding the NetStacker. Please review it before proceeding with the installation.

NetStacker Chassis Power Supply

The Netstacker chassis has a **6-amp power supply limit**.

You cannot install combinations of expansion modules that use more than the 6-amp power supply limit into a NetStacker base or expansion chassis.

Therefore, the following expansion module configurations **MUST NOT** be used within the same NetStacker chassis:

- ❑ (2) AH2072H10-BNC modules (totals 7 amps)
- ❑ (1) AH2072NMM and (1) AH2072H10-BNC (totals 6.3 amps)
- ❑ (1) AH2072NMM and (1) NetConnect Bridge (totals 6.1 amps)
- ❑ (1) NetConnect Bridge and (1) AH2072H10-BNC (totals 7.1 amps)



Using any of the combinations listed above can result in physical damage to the chassis and/or modules.