

Introduction

=====

Asante's FriendlyNET-Home USB To Ethernet Adapter is designed to connect USB-equipped a desktop, notebook, or USB hub to an Ethernet network. It performs the same function as traditional Network Interface Cards without opening up the PC and installing the card. A USB-equipped PC can simply connect an Ethernet network with this USB To Ethernet Adapter, users can share files between computers, use printers and Internet access, send and receive e-mails, access CD-ROM/backup drive attached to others PCs, etc.

* Hassle-Free Connection

USB (Universal Serial Bus) is a new type of connector to replace all the different kinds of serial and parallel port connectors with one standardized plug and port combination. It can reduce connection confusions when adding, removing, or swapping any devices to PCs. Just plug into the USB port of at the back of your PC without opening up the PC, installing add-in cards, or setting DIP switch or IRQs.

* Hot-swapping

The USB To Ethernet Adapter features "hot-swapping" and doesn't need to shut down and restart your PC to attach, add, or remove a peripheral. Just plug it in easily and go! The PC automatically detects the peripheral and configures the necessary software. Users of multi-player games, business and notebook PC users who want to share peripherals all can take the most advantages.

* Easy Installation

The USB To Ethernet Adapter provides easy-to-install steps and drivers for compatibility with PC is running the Windows 98 network operating system. LEDs on the adapter indicate the network and traffic status for simple troubleshooting.

* System Requirement

1. Personal Computer with USB interface
2. Windows 98 operation system
3. Windows 98 CD-ROM

Key Features

=====

- * Easy to connect USB-equipped desktop PCs or notebook to an Ethernet network.
- * Simple to install without opening up your PC.
- * No hassles of I/O address or IRQ settings.
- * Hot swapping.
- * Compatible with Windows 98.
- * Two diagnostic LEDs to indicate USB and network status.
- * No external power adapter required and bus-power driven from the Universal Serial Bus host controller.
- * Portable design and pocket size.

Technical Specification

=====

- * Standard : IEEE 802.3 10BASE-T and USB Ver. 1.0/1.1
- * Data Transfer Rate : 10Mbps
- * Memory Size : 32Kbyte
- * Media Support : 1 RJ-45 and 1 USB B-type ports
- * LED Display : Link, and Ready
- * Power : Bus power from USB host controller
- * Dimension : 5.4 x 3.75 x 3.3 cm (DxWxH)
- * Net Weight : 47.5g
- * Temperature : 0°CXC~55°CXC (Operating); -20°CXC~70°CXC (Storage)
- * Humidity : 10~90%
- * Certification : FCC, CE Mark

Package Contents

=====

- * One USB To Ethernet Adapter
- * One A-B Cable (1 meter)

* One diskette embedded with drivers and user's guide

Hardware

=====

* LED indicators

The LED indicators include Link and Ready.

LNK: The LED is on when there is an active Ethernet connection.

RDY: The LED is on means that the host is connected ready.

* Connectors

It consists of 1 RJ-45 and 1 USB B-type ports.

RJ-45 Port: This port is used for connection to an Ethernet 10BASE-T network.

USB B-type Port: This port is used to connect the USB B-type connector of the USB cable in conjunction with USB-equipped desktop PC / Network

Installation

=====

Step 1. Plug the USB To Ethernet Adapter into USB connector of PC, Windows 98 prompts "New Hardware Found" window.

Step 2. This "Add New Hardware Wizard" window means that Windows 98 will attempt to search a suitable driver for the USB To Ethernet Adapter.

Step 3. Windows 98 prompts you to decide the way of driver installation. Choose "Search for the best driver for your device" and then click "Next" button.

Step 4. Insert driver diskette to floppy A:, and choose "Specify a location", and type in "a:"

Step 5. Windows 98 finds the driver of the USB To Ethernet Adapter, then click "Next".

Step 6. Windows 98 prompts you to insert diskette again, just click "OK"

Step 7. Windows 98 prompts you to locate the device driver "USBENET.SYS", please type in a: and make sure that your driver diskette is in Floppy A:, then click "OK"

Step 8. If you do not have Windows 98 CD-ROM in your CD-ROM drive, Windows 98

will prompt you to insert "Windows 98 CD-ROM", and then click OK.

Step 9. Please specify your CD-ROM path if Windows 98 cannot find it automatically.

Step10. Windows 98 finishes installing the software for the "USB To Ethernet Adapter", click "Finish"

Step11. Windows 98 prompts you to restart your computer, click "Yes" to finish driver installation.

Notices:

=====

Please don't swap continually before the host finishes detecting when the USB To Ethernet Adapter is connected to the host or other devices; otherwise the system will shut down and reboot.

FCC Statement

=====

This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instructions in this manual, may cause interference to radio communications. This equipment has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of the FCC rules, which are designed to provide reasonable protection against radio interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures are necessary to correct the interference.

CE Declaration of conformity

=====

This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 class A for ITE and EN 50082-1. This meets the essential protection requirements of the European Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

Trademarks

=====

All company, brand, and product names are trademarks or registered trademarks of their respective companies.

Copyright 1999 Asante Co. All rights reserved. No part of this documentation may be reproduced, translated, adapted in any form without the permission from the published.

----- End of Manual.txt -----