

Asanté FBT100 USB Bluetooth USB Adapter Using Mac OS X 10.2.2 or Higher



Apple Computers Inc. provides native Bluetooth support with Mac OS X 10.2.2 "Jaguar" or higher, that will allow you to use the Asanté FBT100 Bluetooth USB Adapter without installing software from Asanté.

System Requirements:


- OS X 10.2.2 compatible Macintosh computer
- One free USB Port
- Mac OS X v10.2.2 "Jaguar", or higher

Installation:

1. With the Macintosh off, plug the Asanté FBT100 USB Bluetooth adapter into any available USB port.



2. Start the Macintosh computer. OS X will detect the Asanté FBT100 USB Bluetooth adapter and load Apple's Bluetooth driver, Bluetooth System Preference and Bluetooth Utility for OS X 10.2.2.

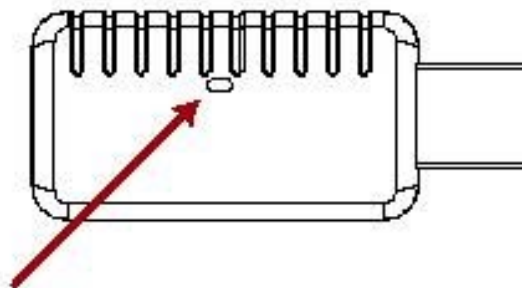

Status LED:
Flashing blue LED indicates the adapter is operating normally.

NOTE: You must have a minimum of two Bluetooth devices to use the Asanté FBT100 USB adapter as intended.

3. Configure the OS X Bluetooth System Preference according to your Bluetooth wireless usage.

For additional help when using the Asanté FBT100 Bluetooth USB Adapter with Mac OS X 10.2.2, we recommend going to the Apple web site at:

<http://www.info.apple.com/>

Using Apple's Knowledge Base search engine, type in keywords, such as, "Bluetooth help", then click "GO". This will access several Apple Techinfo

Library documents that will explain how to configure your Macintosh running OS X 10.2.2, when using Bluetooth devices, such as the Asanté FBT100 Bluetooth USB adapter.

NOTE: Due to Apple's implementation of Bluetooth wireless in OS X 10.2.2, using the Asanté Bluetooth USB Adapter in a Macintosh may not be compatible sharing files with other Bluetooth compatible Windows computers.