

# AsantéHub 2072 Chassis Installation Guide

- **Introducing the Asanté 2072 Chassis on page 3**
- **Installation on page 6**
- **Technical Specifications on page 9**



**ASANTÉ**

## AsantéHub 2072 Chassis Installation Guide

### Technical Support

Asanté Technologies is committed to providing you with reliable products and excellent technical support. Please contact us with any questions, concerns, or suggestions. You can reach us by phone, letter, or electronic mail, from 6:00 AM to 5:00 PM, PST at:

#### Technical Support

**Asanté Technologies, Inc.**

**821 Fox Lane**

**San Jose, CA 95131**

**(800) 622-7464**

**AppleLink address: ASANTE.TECH**

**Internet address: support@asante.com**

Please have the model number prior to contacting technical support.

### Tell us What you Think

There's always room for improvement and Asanté Technologies is always interested in your comments and suggestions about our product documentation. If you take the time to make suggestions, we will take the time to read and consider them for new documentation releases.

Do us a favor and read through this Installation Guide and think about these questions:

- 1** What do you like best about this Guide?
- 2** What do you think is the least valuable or weakest part of this Guide?
- 3** What is the most needed improvement you would make to this Guide?

Think about your answers and then give us a ring.

You can fax your comments and suggestions to:

**Asanté Technologies**

**Attn: Technical Publications**

**(408) 432-1117**

or E-mail us through Internet to:

**techpubs@asante.com**

## Introducing the Asanté 2072 Chassis

The AsantéHub 2072 Chassis is a dual segment, departmental Ethernet concentrator designed with enterprise level features. Its seven-slot architecture lets you add a variety of multiport repeater modules, which offer several cabling options, as well as an SNMP-based network management module (NMM). Some modules, which fill two slots, provide twice as many ports for connecting to other devices. In complete compliance with the IEEE specifications for Ethernet, the chassis can be incorporated easily into an enterprise network or establish a solid platform for departmental growth.

See Figure 1 and Figure 2.


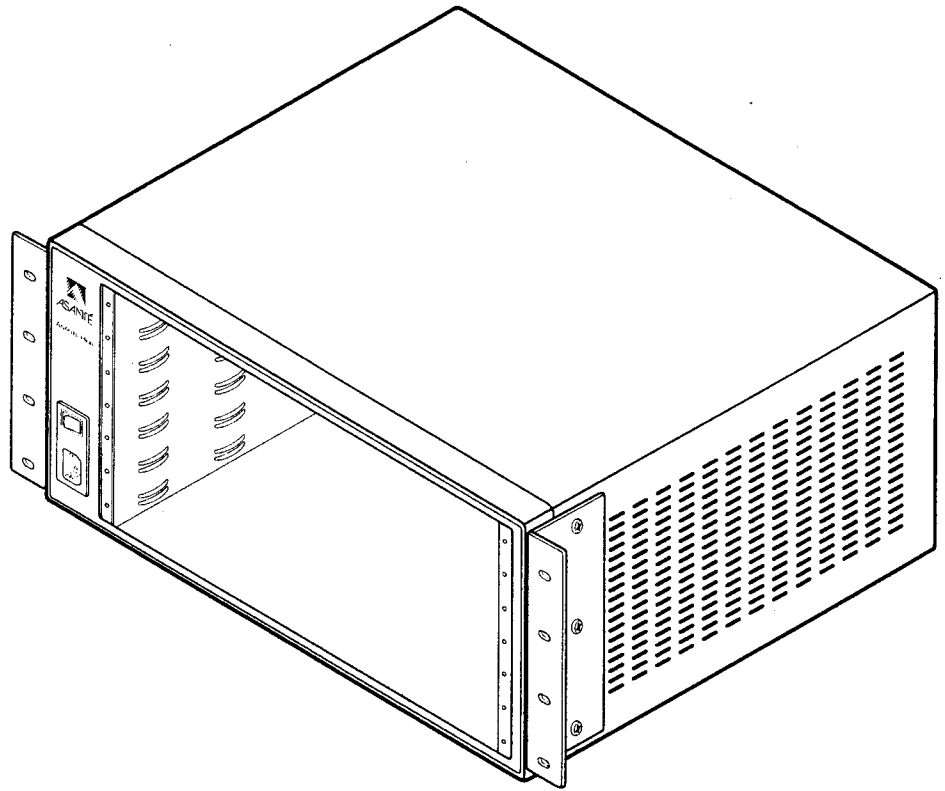


Figure 1 Asanté 2072 Chassis

## AsantéHub 2072 Chassis Installation Guide

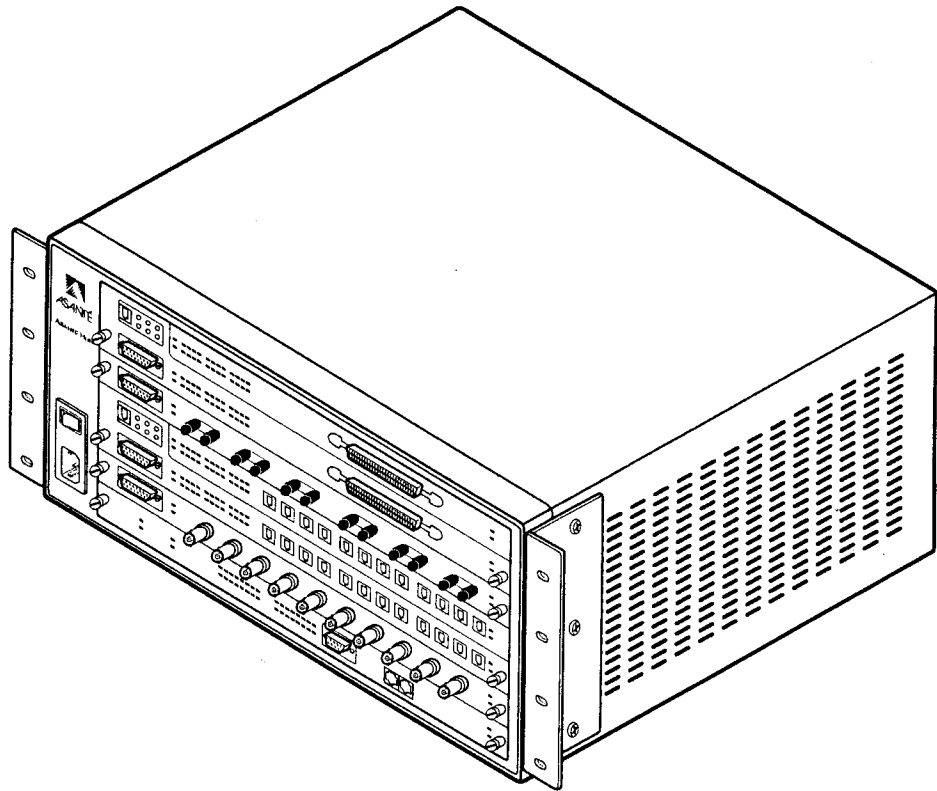

**Figure 2 Fully Populated Chassis**

The Asanté 2072 chassis has the following features:

- Seven slots to accept a variety of multiport repeater modules, allowing you to add nodes when needed.
- Dual-segment backplane lets you assign any repeater module in any slot to either of two segments (either Segment 1 or Segment 2) and create two separate networks
- Universal AC-input switching power supply, thermal protection scheme and dual-fan architecture
- Redundant power supply (optional) provides added security in mission critical applications.
- Complete compliance with IEEE 802.3 specifications for Ethernet

## Introducing the Asanté 2072 Chassis

- ❑ In-band and out-of-band management capabilities using AsantéView network management software from Macintosh and Windows PC platforms, or from a VT100 terminal
- ❑ Remote out-of-band management using the RS232 connector
- ❑ Hot-swappable modules

The 2072 chassis accommodates seven slots for single or double-slotted multiport repeater modules and a network management module. Since all cables attach to the front of the modules, you can easily access the connections in both rack mount and desktop installations.

Segment control lets you create separate Ethernet networks using the chassis's dual backplane. Using the NMM's Segment Control buttons or using AsantéView software, you can isolate a repeater module or assign it to one of the two segments. You may choose to do this to help balance traffic or to separate a module from the rest of the network when testing network equipment.

For mission-critical applications, the 2072 chassis can be ordered with redundant power supply chassis. Each of the two power supplies can singularly support the system's full power requirements. This feature is particularly useful for networks where uptime is extremely critical.

Modules are hot swappable. This means you can make changes or repairs, without powering down or without interrupting the whole network.

For detailed information concerning the modules, see the module installation guides that are shipped with each module.

## Installation

This section explains how to install the 2072 chassis into a rack or onto a desk.

The Asanté 2072 chassis package includes the following items:

- Chassis in protective plastic packaging
- AC power cable
- Two mounting brackets and ten screws for rack mounting
- Four self-adhesive feet for desktop mounting
- This installation guide
- Warranty card

### Required Work Area

Before unpacking the chassis, make sure that you have a large, dust-free, clean, and electrostatically safe work area.

### Positioning the 2072 Chassis

To correctly position the chassis, make sure you:

- Place the chassis near an AC outlet
- Place the chassis within 100 meters if you are using twisted pair cable (10BaseT); 185 meters for thin Ethernet cable (10Base2), two kilometers for fiber optic cable (10BaseF)
- Leave a two-inch clearance around the ventilation grills.

- ❖ Note: Do not place the chassis near sources of electrical interferences, such as motors or heavy current switches.
- ❖

Normal office temperature and humidity generally suit this type of equipment (operating temperature: 0° to 40° C ambient).

### Desk Mounting the Chassis


To desk mount the chassis, do the following steps:

- 1** Peel the protective strips from the self-adhesive feet and apply the feet in the four corners of the base of the chassis.
  - ❖ Note: Make sure your desk or table can support approximately 40 lbs for a fully loaded chassis.❖
- 2** Place the chassis on a flat, stable surface.

**Rack Mounting the Chassis**

To rack mount the chassis, do the following steps:

- 1** Mark the desired location on the rack.
- 2** Fasten the brackets to the chassis, using the hardware provided.
- 3** Fasten the chassis to the rack, (get an assistant to hold it in place if necessary), using the screws provided. See Figure 3, Rack-mounting the Chassis.

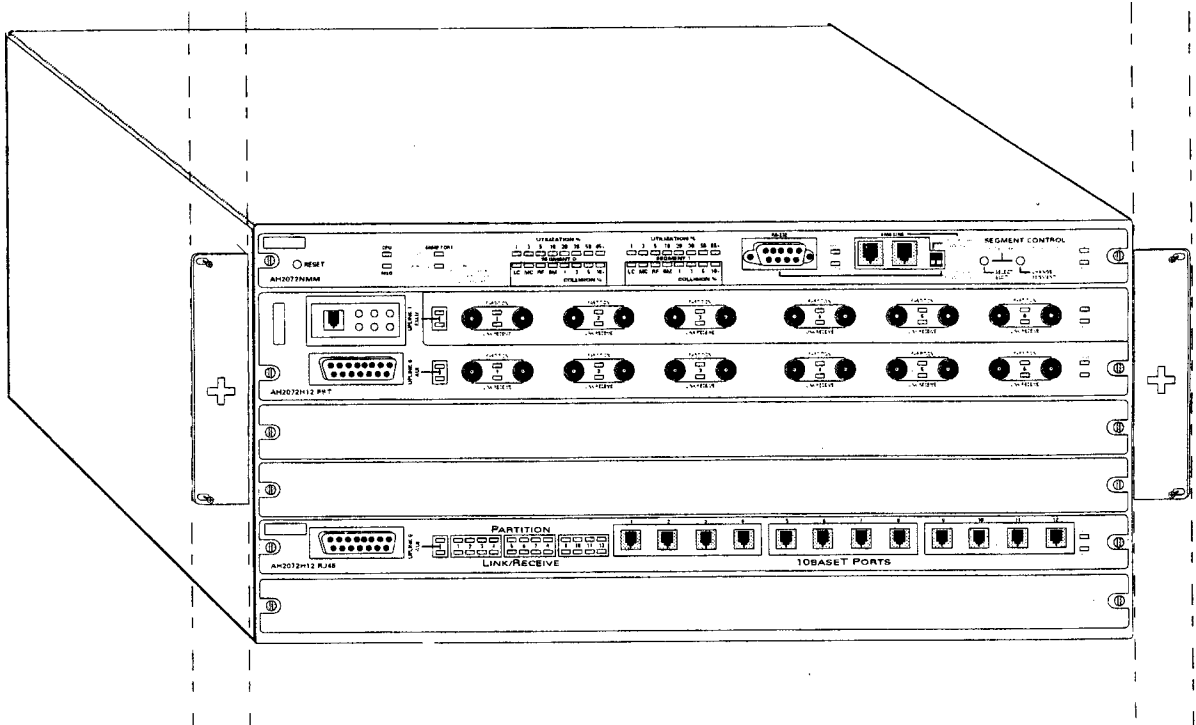

**Figure 3 Rack-Mounting the Chassis**

# AsantéHub 2072 Chassis Installation Guide

## Powering Up the Hub

This section explains how to power up the hub for functionality. If you are installing more than one hub, you may want to repeat this procedure for each hub before attaching any device or network connections.

To power up the hub, do the following steps:

- 1** Make sure the power toggle switch is in the **off** position on the front panel.  
❖ Note: Never remove or insert the power cord with the power switch turned **on**.❖
- 2** Attach the power cord to the socket on the front panel and connect it to an AC outlet.
- 3** Turn **on** the power switch.

## Checking the Fuse

A blown fuse usually indicates a serious problem in the power supply. Contact technical support to help you determine the cause and whether you should replace the fuse, or return the original for testing and servicing.

To check the fuse, do the following steps:

- 1** Make sure the power is turned **off** and unplug the hub.
- 2** Insert a small screwdriver under the fuse faceplate located on the hub's front panel and lift it off.
- 3** Check the fuse to see if it has blown.  
A back-up fuse is stored in the fuse holder (small black box) that is attached to the visible fuse.  
❖ Note: Always use the same type of fuse (4A/250V) that came with the chassis. Failure to do so may result in damage to the hub.

## Technical Specifications

The technical specifications for the Asanté 2072 Chassis are as follows:

### Power Requirements:

Input Voltage: 90-230 VAC, 50-60Hz Single phase; continuous voltage input range

### Input Current: 3A @ 100 VAC (max.)

1.5A @ 220 V

110-220 V auto-sensing frequency

4A/250V Slow Blow Fuse

### Electromagnetic Emissions:

Meets FCC/VDE Class A requirement

### Safety:

Designed in accordance with UL 1950, CSA 22.2 No. 220, IEC 950, TUV and VDE requirements.

### Physical Dimensions:

17"W x 7"H x 12"L

### Weight:

Approximately 20 lbs. (without modules)

### Environmental:

Operating Temperature: 0° to 40° C ambient

Operating Humidity: 5 to 85% noncondensing

Operating Altitude: 10,000 ft. (3,048m) maximum

Storage Temperature: -30° to 80° C

Storage Humidity: 5 to 90% noncondensing

Storage Altitude: 25,000 ft. (7,620m) maximum

### Warranty:

1 year

# AsantéHub 2072 Chassis Installation Guide



**Manual P/N 06-0080-00**  
**Revision B**

