



FriendlyNET Dual 56k *Quick Start Guide*

Asanté Technologies, Inc.
821 Fox Lane
San Jose, CA 95131
1.800.662.9686
www.asante.com

January 1999

Part Number 06-00491-00 Rev. A

Copyright Notice

Copyright ©1998 by Asanté Technologies, Inc. All rights reserved. No part of this manual, or any associated artwork, software, product design or design concept, may be copied, reproduced or stored, in whole or in part, in any form or by any means mechanical, electronic, optical, photocopying, recording or otherwise, including translation to another language or format, without the express written consent of Asanté Technologies, Inc.

TRADEMARKS Asanté Technologies, FriendlyNET and EasyIP are trademarks of Asanté Technologies, Inc. Netscape and Netscape Navigator are registered trademarks of Netscape Communications Corporation in the United States and other countries. Netscape Communicator is also a trademark of Netscape Communications Corporation, which may be registered in other countries. UNIX is a registered trademark in the United States and other countries, exclusively licensed through X/Open Company, Ltd. All brand names and products are trademarks or registered trademarks of their respective holders.

SOFTWARE LICENSE AGREEMENT This is a legal agreement between you (either an individual or an entity) and Asanté Technologies, Inc. By opening the package(s) containing the software you are agreeing to be bound by the terms of this agreement. If you do not agree to the terms of this agreement, promptly return the unopened software package(s) and the accompanying items including written materials and binders or other container(s) to the place you obtained them for a full refund.

1. **GRANT OF LICENSE.** Asanté Technologies grants to you the right to use one copy of the enclosed Asanté Technologies software program per serial number (the "SOFTWARE" is in "use" on a computer when it is loaded into temporary memory (i.e., RAM) or installed into permanent memory (e.g., hard disk, CD-ROM, or other storage device) of that computer. Installation on a network server for the sole purpose of distribution to one or more other computer(s) shall constitute "use" for which a separate license/serial number is required.

2. **COPYRIGHT.** The SOFTWARE is owned by Asanté Technologies or its suppliers and is protected by United States copyright laws and international treaty provisions. Therefore, you must treat the SOFTWARE like any other copyrighted material (e.g., a book or musical recording) except that you may either (a) make one copy of the SOFTWARE solely for backup or archival purposes, or (b) transfer the SOFTWARE to a single hard disk provided you keep the original solely for backup or archival purposes. You may not copy the written materials accompanying the software.

3. **OTHER RESTRICTIONS.** You may not rent or lease the SOFTWARE, but you may transfer the SOFTWARE and accompanying written materials on a permanent basis provided you retain no copies and the recipient agrees to the terms of this Agreement. You may not reverse engineer, decompile, or disassemble the SOFTWARE. If the SOFTWARE is an update or has been updated, any transfer must include the most recent update and all prior versions.

LIMITED WARRANTY Asanté Technologies, Inc. warrants that the SOFTWARE will perform substantially in accordance with the accompanying written materials for a period of ninety (90) days from the date of receipt. Any implied warranties on the SOFTWARE are limited to ninety (90) days. Some states/countries do not allow limitations of duration of an implied warranty, so the above limitation may not apply to you.

CUSTOMER REMEDIES Asanté Technologies' and its suppliers' entire liability and your exclusive remedy shall be, at Asanté Technologies' option, either (a) return of the price paid, or (b) repair or replacement of the SOFTWARE that does not meet Asanté Technologies' Limited Warranty and which is returned to Asanté Technologies with a copy of your receipt. This Limited Warranty is void if failure of the SOFTWARE has resulted from accident, abuse, or misapplication. Any replacement SOFTWARE will be warranted for the remainder of the original warranty period. Outside the United States, these remedies are not available without proof of purchase from an authorized non-U.S. source.

NO OTHER WARRANTIES Asanté Technologies and its suppliers disclaim all other warranties, either express or implied, including, but not limited to, implied warranties of merchantability and fitness for a particular purpose, with regard to the SOFTWARE, the accompanying written materials, and any accompanying hardware. This limited warranty gives you specific legal rights. You may have others which vary from state to state or country to country.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES Asanté Technologies expressly disclaims all liability for any indirect or consequential damages whatsoever (including, without limitation, damages for loss of business profits, business interrupted, loss of business information, or any other pecuniary loss) arising out of the use of or inability to use this Asanté Technologies product, even if Asanté Technologies has been advised of the possibility of such damages. Any suit or legal action relating to this Agreement or Licensed Programs must be brought within one (1) year of the date the programs are purchased by the original licensee. Because some states/countries do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

LIMITATION OF LIABILITY The liability of Asanté Technologies, Inc. arising from this warranty and sale shall be limited to a refund of the purchase price. In no event shall Asanté Technologies, Inc. be liable for costs of procurement of substitute products or services, or for any lost profits, or for any consequential, incidental, direct or indirect damages, however caused and on any theory of liability, arising from this warranty and sale.

U.S. GOVERNMENT Restricted Rights The SOFTWARE and documentation are provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the The Rights in Technical Data and Computer Software clause at DFARS 52.227-7013 or subparagraphs (c) (1) and (2) of the Commercial Computer Software—Restricted Rights at 48 CFR 52.227-19, as applicable.

Manufacturer is Asanté Technologies, Inc., 821 Fox Lane, San Jose, California 95131. If you acquired this product in the United States, this Agreement is governed by the laws of the State of California. Should you have any questions concerning this Agreement, or if you desire to contact Asanté Technologies for any reason, please contact your local Asanté Technologies subsidiary or sales office, or write: Asanté Technologies, Inc., 821 Fox Lane, San Jose, California 95131.

WARRANTY DISCLAIMERS Asanté Technologies, Inc. makes no other warranties, express, implied, or otherwise, regarding the FriendlyNET Dual 56K and specifically disclaims any warranty for merchantability or fitness for a particular purpose. The exclusion of implied warranties is not permitted in some states and the exclusions specified herein may not apply to you. This warranty provides you with specific legal rights. There may be other rights that you have which vary from state to state.

Safety Precautions

Read and follow all warning and instructions included with this product.

Do not block the ventilation slots on the FriendlyNET 2114. Do not subject the FriendlyNET 2114, even if it is not plugged in, to an environment that exceeds temperature and humidity specifications.

Do not place cords or cables where they may be walked on or tripped over.

Be sure to comply with any applicable local safety standards or regulations.

General purpose cables are provided with this product. Any cables or other requirements mandated by local authority are your responsibility.

Cables that are attached to devices in different locations that have different power sources and grounding may have hazardous voltage potentials. Consult a qualified electrical consultant before installing the product to see if this phenomenon exists and, if necessary, take corrective action.

Never touch annunciated telephone wires or terminals unless the line has been disconnected.

Avoid using telephone equipment or installing the product during an electrical storm.

Never install telephone jacks, lines, network cables, this product, or power connections in wet locations.

Modem Information

Our internal modems are capable of 56 Kbps downloads; however, due to FCC rules which restrict power output of service providers' modems, current download speeds are limited to 53 Kbps. Actual speeds may vary depending on line conditions. Uploads from end users to service providers travel at speeds up to 28.8 Kbps. A V.90 modem, an analog phone line compatible with V.90 technology and an Internet provider with V.90 service are required for these high-speed downloads.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Consult the dealer or an experienced radio/TV technician for help

Table of Contents

Installation	3
What's in the Box?	4
The FriendlyNET Dual 56K package contents:	4
What Do I Need?	4
Installation Steps	5
Connecting the FriendlyNET Dual 56K	5
Set up Networking	7
Install a Web Browser	7
Configure the FriendlyNET Dual 56K	7
Restart your Computer	14
Setting Up the Rest of the Computers	15
Setting up Networking	16
Setting Modem Options	17
Adding a Modem	18
Basic Networking	20
Removing Dial-Up Adapters for Windows 95	21
Installing TCP/IP for Windows 95	21
Configuring TCP/IP for Windows 95	21
Installing TCP/IP for the Macintosh	22
Configuring TCP/IP for the Macintosh	22
Troubleshooting	23
How to Use this Table	23
Frequently Asked Questions	31
Technical Support	35

Table of Contents

1

Installation

This Quick Start describes the features, installation and initial configuration of the using a Windows 95 or Macintosh computer. This guide is intended for both first-time and experienced computer network users who want to install and use the FriendlyNET Dual 56K, and connect to the Internet as quickly as possible.

The FriendlyNET Dual 56K comes with two internal 56K (v.90) modems and an available serial port for adding a third modem. Use one or both internal modems, or add an external modem for near-ISDN speeds to the Internet for the entire company. The FriendlyNET Dual 56K is a full-featured, stand-alone, 4-port Ethernet hub and router for connecting Local Area Networks (LANs) to the Internet. With the FriendlyNET Dual 56K, you have complete configuration flexibility and the ability to have multiple users share Internet access.

If you are working with a router for the first time, it is possible you may make mistakes. We have tried to identify these likely errors you may make and have provided hints and tips to help you recover from error situations.

Once you have carried out the initial configuration of the FriendlyNET Dual 56K, you can carry out additional configuration to optimize the FriendlyNET Dual 56K's performance on your network.

Installation

What's in the Box?

Before you install the FriendlyNET Dual 56K, check the contents of the box against the packed contents checklist below. If any of the items have been damaged in transit or are missing, contact the FriendlyNET Dual 56K dealer from whom the equipment was purchased.

The FriendlyNET Dual 56K package contents:

- FriendlyNET Dual 56K
- Power Adapter (U.S. and Canada only)
- Straight through Ethernet cable (RJ-45 to RJ-45)
- FriendlyNET Dual 56K Quick Start Guide
- CD-ROM containing printable FriendlyNET Dual 56K CLUI Manual and Web Browser software.

What Do I Need?

The following lists the items you need to install the FriendlyNET Dual 56K. Please review this list and check off each box to make sure you have everything before you start installing your FriendlyNET Dual 56K.


- Windows or Macintosh computer, each with a 10Base-T Ethernet network card and TCP/IP stack installed** (*See "Basic Networking" on page 20.*)
- Standard phone line (separate line and number for each modem)
- PPP (dial-up) Internet account for each modem to connect to the Internet**
- Web browser (use a favorite or install Internet Explorer from the FriendlyNET Dual 56K CD if located inside the U.S. or Canada)
- If you are missing any of these items, you will not be able to install the FriendlyNET Dual 56K.
- Optional:* An external modem with a female DB-9 modem cable to connect to the FriendlyNET Dual 56K Modem 3 port

Installation Steps

Refer to the illustration and follow the simple steps below to quickly install your FriendlyNET Dual 56K.

Connecting the FriendlyNET Dual 56K

Connect the Computers to the FriendlyNET Dual 56K.

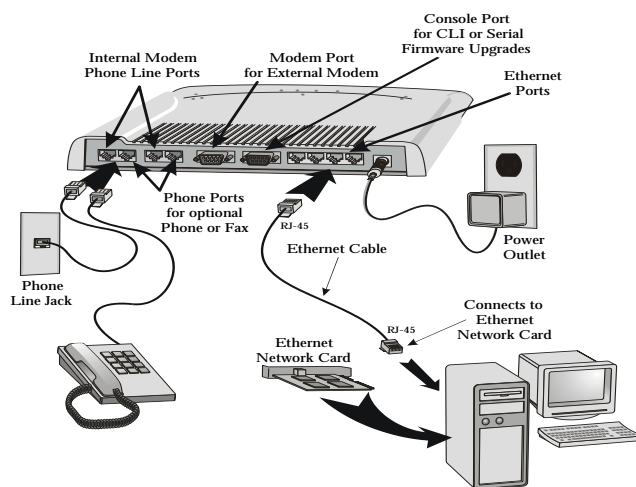

Connect the Ethernet cable from the Ethernet card (in your computer) to Ethernet port 1/H on the back of the FriendlyNET Dual 56K.

- △ If you have an existing network, unplug the Ethernet cable from your existing hub and plug it into Ethernet port 1/H on the FriendlyNET Dual 56K.
- ▲ If you are connecting the FriendlyNET Dual 56K to a auto-negotiating hub or switch the Ethernet Port LED may flash intermittently for up to 60 seconds before making the network connection. This is due to the auto-negotiation process.

Installation

- 1 **Connect the Phone Line**
Use a standard phone cable to connect the FriendlyNET Dual 56K line port to the phone wall jack.
- 2 **Connect a Phone or Fax (*optional*)**
If you have a phone or fax machine, connect it to the FriendlyNET Dual 56K using a standard phone cable with a standard connector. Plug the connector into the phone port on the FriendlyNET Dual 56K.

The only difference between the FriendlyNET Dual 56K Line connection and the Phone connection is that the phone or fax will not operate when the FriendlyNET Dual 56K is turned off.

- 3 **Connect the Power**
Connect the power supply cable to the back of the FriendlyNET Dual 56K, then plug the other end into a wall outlet.
 - ▲ The LEDs will flash for about 10 seconds while the FriendlyNET Dual 56K performs internal diagnostics. The following LEDs should be lit if you have connected everything correctly:
 - ☐ *Power* and *Diag* LEDs should be green
 - ☐ *Ethernet Port* LED that your computer is connected to should be green
 - ▲ If these LEDs are not operating correctly, or if any other LEDs are lit, See “Troubleshooting” on page 23. for a complete description of the LEDs and connections.

Set up Networking

- 1 Use the computer that you have connected to the FriendlyNET Dual 56K for installation and configuration.
- 2 Check the Ethernet cable and make sure it is properly connected from the computer's Ethernet card to the FriendlyNET Dual 56K. If you are using an existing network, make sure the Ethernet cable is **NOT** connected to the existing hub.
- 3 Verify the computer has TCP/IP installed and configured to *Obtain an IP address automatically*. See "Basic Networking" on page 20. for additional information.
- 4 Restart your computer to obtain an IP address automatically.

Install a Web Browser

Install a web browser (if not already installed) on your computer. If you don't have a web browser installed, Internet Explorer is included on the FriendlyNET Dual 56K CD (if located inside the U.S. or Canada).

Configure the FriendlyNET Dual 56K

- 1 Start your web browser and type **192.168.1.1** in the *Address* or *Go To* area to access the FriendlyNET Dual 56K Configuration page.


Installation



To add the FriendlyNET Dual 56K Configuration page as a bookmark:

- ▲ For Netscape Navigator, select **Bookmarks** and then select **Add to Bookmarks**
- ▲ For Internet Explorer, select **Favorites** and then select **Add to Favorites**

- 2 Click **Wizard** to start configuration of your FriendlyNET Dual 56K and then click **Next** to enter your Internet account information.

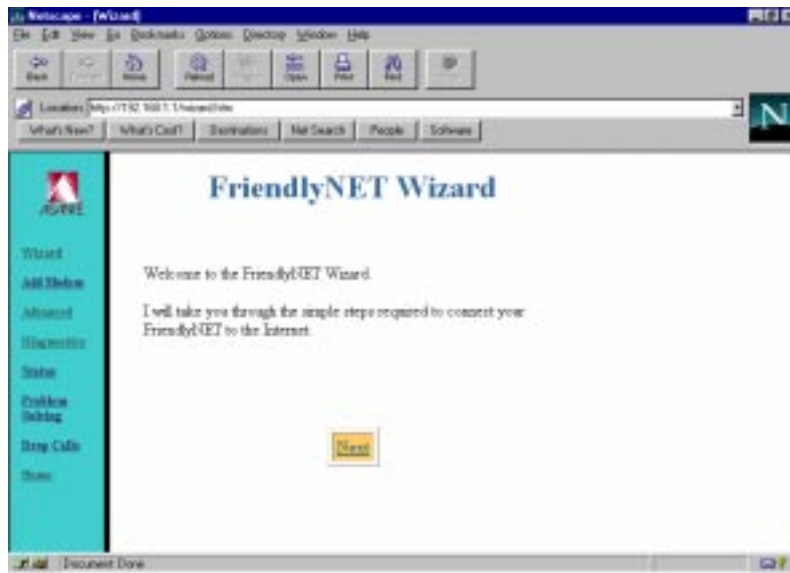

Installation

- 3 Enter the ISP name (optional), ISP phone number, and the user name and password provided by your ISP and then click **Next**. The user name and password fields are case-sensitive, so be careful when entering information.




- To disable Call Waiting, type *70 or 1170 with a comma immediately following, and then the phone number (for example, *70,5551212). Check with your local phone company for the correct sequence to disable Call Waiting if *70 or 1170 doesn't work.
- If you need to use a special character (for example 9) to access an outside line, enter the phone number as *9,5551212*.

- 4 If your ISP requires a login script to connect to the Internet, click **Enable Login Script** and enter the login script on the next page. Otherwise click **Next** to continue.



Installation

- 5 Enter at least 1 Domain Name Server (DNS) IP address provided by your ISP and then click **Next**. The Domain Name, DNS Server 2 and DNS Server 3 are optional.

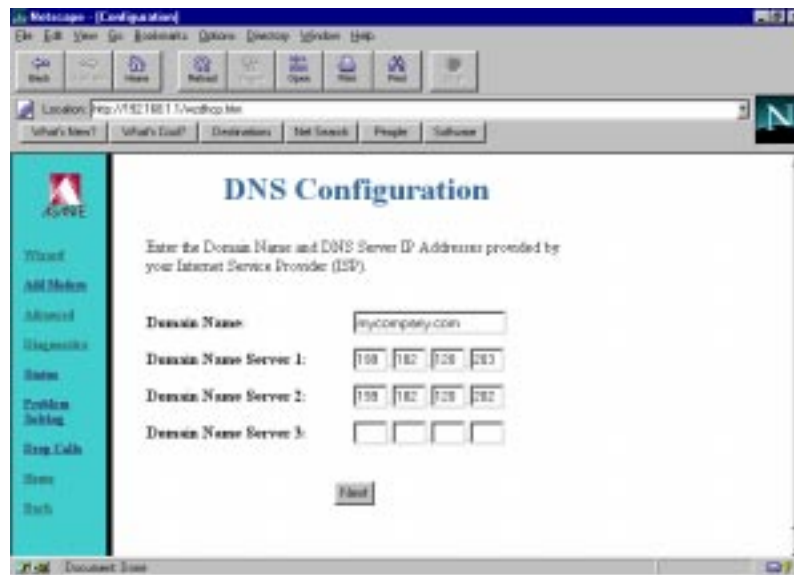

- 6 Click **Next** after DNS configuration of the FriendlyNET Dual 56K.



Installation



Congratulations! You've now completed configuration of your FriendlyNET Dual 56K. Please close your web browser and any other open applications.

Restart your Computer

You must now restart your computer to update the network and configuration settings. When your computer restarts, open your web browser and let the FriendlyNET Dual 56K automatically dial your ISP and connect you to the Internet.

- △ You must restart your computer to access the Internet.

Setting Up the Rest of the Computers

▲ To setup the rest of the computers on your network, verify you've completed the following steps on each computer:

- 1 A 10Base-T Ethernet network card is installed and configured and an Ethernet cable connects to an available Ethernet port on the FriendlyNET Dual 56K.
- 2 TCP/IP is installed and configured to *Obtain an IP address automatically* (See "Basic Networking" on page 20. for additional information).
- 3 Each computer has restarted to update the network settings.
- 4 A web browser is installed.

▲ If you have any problems connecting the computers on your network to the Internet, See "Troubleshooting" on page 23.


Installation

The following illustrates how to setup the rest of the computers on your network.

Setting up Networking

Setting Up Networking :

- Install Ethernet cards in each computer and connect the Ethernet cables from the computer to the FriendlyNET 2114a
- Connect power to the FriendlyNET 2114a
- Install and configure TCP/IP on each computer

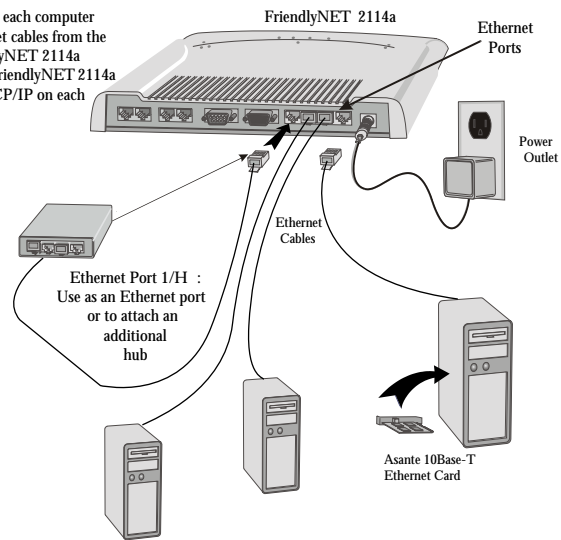

Setting Modem Options

▲ Follow these steps to setup modem options for the modems on the FriendlyNET Dual 56K:

- 1 From the FriendlyNET Dual 56K Configuration page, click **Advanced** and then click **Modem 1**.
- 2 Verify **Enable Modem Port** is selected, select the **Volume Control**, select **Picking up an attached phone will interrupt an existing data call if you have a phone connected to the FriendlyNET Dual 56K** and then click **Apply**.



Installation

Adding a Modem

▲ Before using the second internal modem on the FriendlyNET Dual 56K, make sure you have a separate phone line and ISP account. Follow these steps to add the second internal modem:

- 1 Start a web browser and type **192.168.1.1** to access the FriendlyNET Dual 56K Configuration page (or select *Configuration* from your bookmarks if you saved the location).
- 2 Click **Add Modem** and then click **Modem 2**.
- 3 Enter your ISP information for Modem 2 and then click **Next**.



The screenshot shows a web browser window titled "Configuration" with a menu bar (File, Edit, View, Go, Favorites, Options, Devices, Windows, Help) and a toolbar. The address bar shows "http://192.168.1.1/ispconfig.htm". Below the browser window is the "ISP Configuration" page. The page has a blue sidebar with navigation links: "Work", "Add Modem", "Advanced", "Diagnosis", "Status", "Enable Logging", "Download", "Home", and "Back". The main content area is titled "ISP Configuration" and contains the following text: "Enter the following information as provided by your Internet Service Provider (ISP). This information will be used to connect Modem 2 to the Internet." Below this text are several input fields: "Name of ISP:" with the value "myISP", "ISP's Phone Number:" with the value "773.555.1212", "User Name:" with the value "myAccount", "Password:" (empty), "Confirm Password:" (empty), and "Idle Time (seconds):" with the value "180". At the bottom of the form, there is a note: "The connection will disconnect if there is no activity on this connection for the specified Idle Time."

- 4 If your ISP requires a login script to connect to the Internet, click **Enable Login Script**, enter the login script and click **Next**. Otherwise click **Next** to continue.

- 5 Select **Dynamically select second and third modem when required** for modem multiplexing and click **Next**. Optionally, select **Always use all modems** for a maximum bandwidth Internet connection.



- 6 Click **Finish** to return to the FriendlyNET Dual 56K Configuration page.



Installation

Basic Networking

- △ This section explains how to install and configure TCP/IP to communicate with the FriendlyNET Dual 56K, using either a Windows 95 computer or a Macintosh computer. If you have a new or existing network, you need to install and configure TCP/IP to communicate with the FriendlyNET Dual 56K.
- If you have an existing Windows 95 network, you need to change your network settings to communicate with the FriendlyNET Dual 56K. Once the FriendlyNET Dual 56K is configured, you can either use your new IP addresses or the pre-existing IP addresses (see "Existing IP Networks" and "Existing DHCP Networks" in the FriendlyNET Dual 56K Reference Manual).
- If you have an existing Macintosh network, you need to change your Open Transport settings to communicate with the FriendlyNET Dual 56K. Once the FriendlyNET Dual 56K is configured, you can either use your new IP addresses or the pre-existing IP addresses .

Removing Dial-Up Adapters for Windows 95

If you have an existing dial-up adapter configured in your computer (such as AOL dial-up adapter), it may conflict with the Ethernet adapter and not allow you to configure your FriendlyNET Dual 56K. Once you have successfully configured your FriendlyNET Dual 56K, you can re-install the dial-up adapter.

Follow these steps to remove an existing dial-up adapter:

- 1 Click **Start** | **Settings** | **Control Panel** and then open the **Network** control panel.
- 2 Select the dial-up adapter and then click **Delete**.
- 3 Click **OK** twice and restart your computer.

Installing TCP/IP for Windows 95

Follow these steps if you have a new network and have not installed TCP/IP for Windows 95:

- 1 Click **Start** | **Settings** | **Control Panel** and then open the **Network** control panel.
- 2 Click **Add**, select **Protocol** and then click **Add**.
- 3 Select **Microsoft**, select **TCP/IP** and then click **OK**.

Configuring TCP/IP for Windows 95

Follow these steps if you've already installed TCP/IP and need to configure (or modify) the settings:

- 1 Click **Start** | **Settings** | **Control Panel** and then open the **Network** control panel.
- 2 Select **TCP/IP** and then click **Properties**. The Network Properties window consists of several tabs. Set each tab back to the default values.
- 3 Click **OK** twice to restart your computer and update the network settings.

Installation

Installing TCP/IP for the Macintosh

If your Macintosh has system software version 7.5.3 or later, then you have Open Transport 1.1.1 (or later) already installed. The current release of Open Transport is 1.3 and is automatically installed with system software version 8.1.

Configuring TCP/IP for the Macintosh

Follow these steps to configure TCP/IP:

- 1 From the Apple menu, select **Control Panels** and then select **TCP/IP**.
- 2 From the **Connect via** pull-down menu select **Ethernet** and from **Configure** select **Using DHCP Server**.
- 3 Close TCP/IP, click **Save** and then restart your Macintosh.

Troubleshooting

The troubleshooting table is organized in a “bottom-up” fashion. The hardware and line problems are listed first, then the high level router configuration problems are covered.

How to Use this Table

If you are having any type of connection problem, such as the computers on the local LAN cannot connect to the Internet, you should work your way down the table to eliminate any low-level problem before working through the WAN connection problems.

LEDS	Status	Operation
Power	Green (steady)	Power is turned on.
Diag	Green (steady)	All internal diagnostic tests have been completed and the FriendlyNET 2214a is functioning properly. The LED should turn on and remain on within 10 seconds after power is applied. In case of hardware failure, this LED flashes amber with a coded message.
Ethernet (4)	Green (steady)	Proper connection to a computer or additional hub.
	Green (flashing)	Error or collision on the Ethernet port.
	Amber (flashing)	Data is being sent/recieved.

Installation

LEDS	Status	Operation
Collisions	Amber (flashing)	Ethernet data packet collision. Collisions indicate the amount of traffic on the network is very heavy. A computer with a bad Ethernet network card may also cause collisions.
Modem 1,2 or 3	Green (steady)	The modem has a live connection.
Modem 1, 2 or 3	Red (steady)	The modem initialization failed on the last attempt.
Modem 1, 2 or 3	Amber (flashing)	Data is being sent/received.

Symptom	Possible Cause	Action
Power Problems		
Power LED is off	Power is not connected	Check the power cable is fully plugged into an active power outlet and into the power jack.

Symptom	Possible Cause	Action
LAN Connection Problems		
Ethernet LED is off	Ethernet cable is not connected	Check that one end of the Ethernet cable is fully plugged into an Ethernet port. Check that the other end is fully plugged into the Ethernet port on a computer.
	Ethernet cable is damaged	Replace the cable
Does not find the FriendlyNET Dual 56K on the local LAN	Problem with the Ethernet cable on the FriendlyNET Dual 56K	Check the Ethernet LED (<i>see above</i>)
	Problem with the Ethernet cable on the computer	Check that the Ethernet cable is firmly connected to the computer
Web browser does not find the FriendlyNET Dual 56K using its LAN IP address	Problem with the Ethernet cable on the FriendlyNET Dual 56K or on the computer	<input type="checkbox"/> Check the Ethernet LED (<i>see above</i>) on the FriendlyNET Dual 56K <input type="checkbox"/> Check that the Ethernet cable is firmly connected on the computer

Installation

Symptom	Possible Cause	Action
WAN Connection Problems		
You do not hear modem call noise activity when access to a remote network is attempted	No phone number has been entered for the Friendly-NET Dual 56K to dial	<ul style="list-style-type: none"> <input type="checkbox"/> Open a web browser and access the FriendlyNET Dual 56K Configuration page <input type="checkbox"/> Click Advanced and then click Call Control <input type="checkbox"/> Select the Modem port used to access the remote site and then verify either "All outgoing calls only" or "Allow incoming and outgoing calls" is selected <input type="checkbox"/> Click Advanced and then Users <input type="checkbox"/> Verify the user is setup as an authorized user
	Phone line is not connected	<ul style="list-style-type: none"> <input type="checkbox"/> Check that one end of the phone line is plugged into the phone wall jack <input type="checkbox"/> Check that the other end is plugged into the Line port
	Phone cable is damaged	Replace the phone cable

Symptom	Possible Cause	Action
You hear a phone number dialing sequence when a call is attempted but the connection does not complete	Phone number dialed is incorrect	You may need a 9 in front of the number for an outside line Contact the ISP or remote site and verify the phone number
You hear a phone number dialing sequence when a call is attempted but the connection does not complete	Remote site modem is busy	<ul style="list-style-type: none"> <input type="checkbox"/> If you hear a busy signal after the modem dialing sound, the modem at the remote site is busy and the connection needs to be tried at a later time. <input type="checkbox"/> If you have an analog phone, plug the phone into the phone line and try the number. If there is a problem (no dial tone or call does not go through), contact the phone company. If the call goes through, call the remote site and verify the number.

Installation

Symptom	Possible Cause	Action
	There is a line problem	<ul style="list-style-type: none"><input type="checkbox"/> Try calling the remote site again. If the call does not go through now, the problem is either in the phone cable or in the modem port. Switch the cable and try again. If the call still does not go through, repeat the test using the other Line/Phone port pair.<input type="checkbox"/> If the second pair works, then there is a problem with the first Line port

Symptom	Possible Cause	Action
You hear normal modem activity but connection only briefly comes up	PPP negotiation failed due to network negotiation problems	<ul style="list-style-type: none"> <input type="checkbox"/> There are multiple steps in PPP network negotiation. Failure may have occurred in one or more of these steps. <input type="checkbox"/> Both sides must agree on at least one protocol to run over the WAN. If one side has IP enabled and the other has IPX, PPP negotiation will fail. <input type="checkbox"/> For each protocol, the local and remote WAN network addresses must pass negotiation by the other side. Solve PPP network negotiation problems by carefully reviewing the network settings. <input type="checkbox"/> Compare them to the information provided by the ISP or remote site administrator <input type="checkbox"/> Open a web browser, access the Friendly-NET Dual 56K Configuration page and then click Call Control <input type="checkbox"/> Select the modem port and then verify all information is correct

Installation

Symptom	Possible Cause	Action
User on local LAN cannot access remote information, even though the connection is up	The FriendlyNET Dual 56K has incorrect network information	<ul style="list-style-type: none"><input type="checkbox"/> Open a web browser and access the FriendlyNET Dual 56K Configuration page<input type="checkbox"/> Click Problem Solving and read the Error Log to see what PPP network information was negotiated<input type="checkbox"/> Check the remote network protocol information matches the information provided by the ISP or remote site
Accessing remote information is slower than expected	Only one modem line is in use for the connection	<ul style="list-style-type: none"><input type="checkbox"/> You should hear the second modem attempt to establish a connection<input type="checkbox"/> If the connection fails, the remote site may have rejected the connection or there may be a lower level problem (<i>go to the top of this table to investigate the problem further</i>)

Frequently Asked Questions

Q: The FriendlyNET Dual 56K does not dial my modem

A: You may have configured the modem incorrectly. Access the FriendlyNET Dual 56K Configuration page, click **Diagnostics** and then click **Test Modems**. If you are having a problem with the external modem connected to the Modem 3 port, check the users guide that came with your modem for the correct initialization string.

Q: My modem dials but does not connect to the Internet

A: You may have configured your ISP settings incorrectly. Locate the information from your ISP, access the FriendlyNET Dual 56K Configuration page, click **Wizard** and then verify your settings (See “Configure the FriendlyNET Dual 56K” on page 7.). If the problem persists, click **Problem Solving** from the FriendlyNET Dual 56K Configuration page.

Q: The FriendlyNET Dual 56K appears to be connected but I am unable to browse

A: If you are connected to the Internet, the Ethernet and Modem LEDs will be flashing because information is being passed back and forth. If the LEDs are green but are not flashing, you may have set TCP/IP incorrectly on your computer (See “Basic Networking” on page 20. for additional information).

Installation

Q: On the FriendlyNET Dual 56K, can the “idle time” to drop the modem connection be adjusted?

A: Dropping the modem connection based on idle time can be changed using Advanced/Modem 1, Modem 2 or Modem 3 (at the bottom of the screen the modem idle time-out can be changed). The default idle time is 300 seconds .

Q: I typed 192.168.1.1 in the address area of my web browser but could not access the FriendlyNET Dual 56K Configuration page

A: The following lists the reasons why you may not be able to access the FriendlyNET Dual 56K Configuration page:

- Network settings are not correct (See “Basic Networking” on page 20.)
- You did not restart your computer after configuring your network settings
- Ethernet cable is not connected properly (See “Connecting the FriendlyNET Dual 56K” on page 5.)
- Ethernet cable is damaged—obtain another Ethernet cable and try connecting again
- Windows 95 only:* Ethernet card may be causing a conflict (See “Removing Dial-Up Adapters for Windows 95” on page 21.)
- Windows 95 only:* The IP address on your computer may be set incorrectly. Click **Start**, select **Run** and then type **winipcfg** and click **OK**. When the window displays, click **Release All** and then **Renew All**. Your IP address should appear as **192.168.1.x** (x is any number other than 1—192.168.1.1 is the IP address reserved for the FriendlyNET Dual 56K). Click **OK** to close winipcfg.

Q: What could be wrong if my web browser will not bring up a website and I get the error message “No DNS Server?”

A: It could be one of the following.

- You may have configured the DNS settings incorrectly. If you are using the FriendlyNET Dual 56K DHCP server and have completed configuration, simply restart your computer to update the network settings.
- If you are not using the FriendlyNET Dual 56K DHCP server, open the **Network** control panel, double-click **TCP/IP**, select the **DNS Configuration** tab and enter the DNS IP address(es) provided by your ISP. Click **OK** twice to restart your computer and update the settings. I am not actually seeing 3x's 56K performance on the FriendlyNET Dual 56K. What could be the problem?

Q: I am not actually seeing 3x's 56K performance on the FriendlyNET Dual 56K. What could be the problem?

A: The FriendlyNET Dual 56K can support modem speeds up to 3 times that of a single modem (assuming use of three modems). 56K modems must dial into special ports located at the ISP to get performance above 33.6K. Make sure your ISP supports V.90 modems. The FriendlyNET Dual 56K allows you to dynamically use more than one modem at a time. Applications like browsing are helped because they open more than one connection to a single web page, allowing multiple paths to download the text and graphics.

Installation

Q: Do I need to reconfigure the ISDN modem to use it with the FriendlyNET Dual 56K?

A: The FriendlyNET Dual 56K can use any ISDN modem supporting PPP. If the ISDN modem is already configured, the FriendlyNET 2114 simply requires the model and speed parameters.

Q: Will the FriendlyNET Dual 56K work without DHCP?

A: DHCP can be disabled from the FriendlyNET Dual 56K Configuration page (click **Advanced, DHCP and then **Enable/Disable DHCP**), but if DHCP is disabled, you must manually enter the IP address, gateway address and DNS server addresses (typically provided by ISP) for each computer on the LAN.**



Technical Support

Contacting Technical Support

To contact Asanté Technical Support:

Telephone	(800) 622-7464
Fax	(801) 566-3787
Bulletin Board Service (BBS)	(408) 432-1416
FTP Archive	ftp.asante.com
Internet Mail	support@asante.com
WorldWide Web Site	http://www.asante.com

Technical Support Hours

6:00 AM to 6:00 PM Mountain time USA, Monday - Friday.

